Quick Features Guide

Machine Availability

Tap on the **Machines** icon to view all available machines in the laundry room from wherever you are.

Connected Room Required

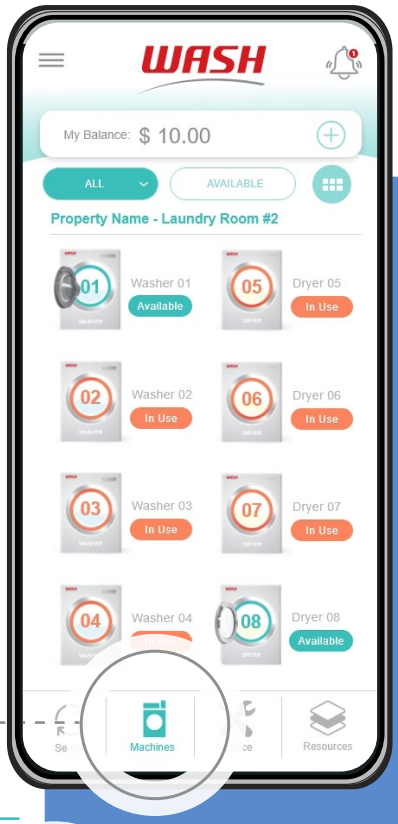

Payment

Tap **Search All Machines** and select an available machine.

Load laundry and then tap **Pay**.

Depending on your machine type, you will either select your fabric setting or push the start button on the machine.

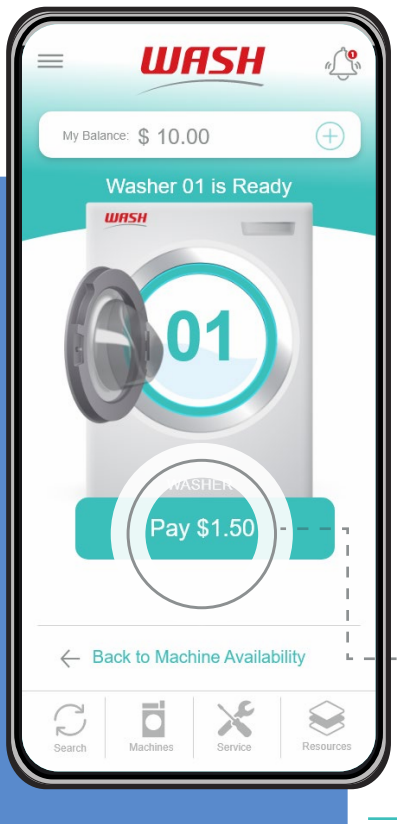

Refund Request

Tap on the **Hamburger** menu and select **View Transactions** to see your transaction history.

Tap on the transaction you'd like a refund for, fill in the required fields, and tap submit.

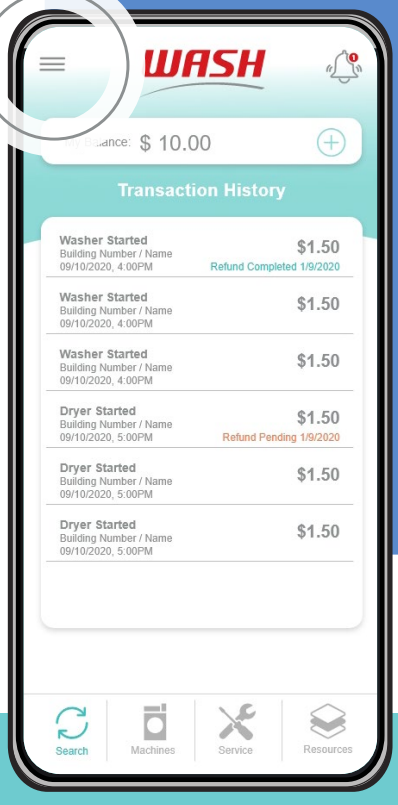

Service Request
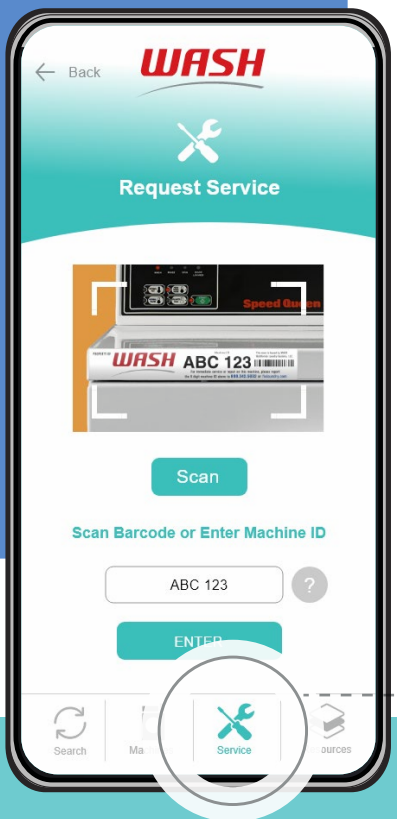
Tap the **Service** icon and simply scan the barcode displayed on the machine or enter the six-digit machine ID.